

Location Hot Key

Attic	Laundry Room
Back	Left
Basement	Library
Bath	Living Room
Bedroom	Lobby
Billiards Room	Lower
Center	Main Floor
Closet	Master Bath
Deck	Master Bedroom
Demarc	Media Room
Den	Office
Dining Room	Outside
Dressing Room	Patio
Floor	Play Room
Foyer	Pool
Front	Porch
Garage	Right
Gate	Sitting Room
Guest Bath	Spa
Guest House	Study
Guest Room	Sunroom
Gym	Theater
Hot Tub	Upper
Inside	Utility Room
Kitchen	

Audio/Video Hot Key AUDIO VIDEO

Analog	Projector
CATV	Remote
CD	RF
Center Back Speaker	RGB
Center Front Speaker	Right Back Speaker
Component	Right Front Speaker
Composite	Right Outdoor Speaker
Digital	Right Side Speaker
DVD	Right Surround Speaker
DVI	RS-232
DVR	SAT
HDMI	Speaker
HDTV	Subwoofer
IR	Surround
Keypad	S-Video
Left Back Speaker	Tap
Left Front Speaker	Touch Screen
Left Outdoor Speaker	TV
Left Side Speaker	VCR
Left Surround Speaker	VESA
Monitor	Video Game
Optical	Volume Control
Phono	Zone

Voice/Data Hot Key VOICE DATA

Cable Modem	LAN
CO	Laptop
Demarc	Network
Desktop	Phone
DSL	Phone System
DSLAM	USB
Fax	VoIP
Internet	Wireless

Security Hot Key SEC

Back Door	High Water
Camera	Horn
Carbon Monoxide	Keypad
CCTV	Low Temp
Cell	Motion Sensor
Contact	Phone
Controller	PIR
Door	Pool
Door Contact	Power
Driveway	Remote
Dual Tech	Sensor
Duct	Shock Sensor
Fan Cutoff	Siren
Front Door	Sliders
Garage Door	Smoke Detector
Gas	Spare
Gate	Strobe
Glass Break	Water Detector
Ground	Window
Heat Detector	Window Sensor

These pre-defined text keys can be very powerful when used with flag and wrap mode. The following example shows how to quickly print a flag label for a speaker wire in your home-entertainment system.

1. Press FLAG to turn on Flag mode.
2. Press AUDIO VIDEO. The first audio/video text, Analog, appears in the display.
3. Press the letter **L**. Left Back Speaker appears in the display.
4. Press L to add the text to the label.
5. Press PRINT. The flag label prints.

Left Back Speaker

Left Back Speaker