


QuickTye-Standoffs™


Instructions:

- 1) Remove one of the QuickTye Standoffs™ from the package and position it on the side of the stud so there is an equal distant from both edges of the stud.

Nail-in Type:

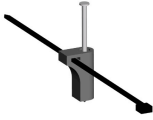

Screw-In Type:

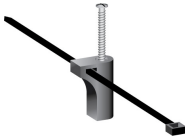

- 2) With a hammer or drill, drive the nail or screw into the stud until it is level with the top of the QuickTye Standoff.



- 3) Gather the cable run wires together and position over the QuickTye Standoff. Loop the cable tie around the wire bundle and feed the tapered end of the cable tie into the head of the cable tie and pull snug*.

* Make sure that the cable tie is snug. However, do not tighten too much. Do not deform the shape of the wire. This could cause problems later.

- 4) Cut the excess cable tie to length and repeat as needed.

